

## CANARE 圧着ダイス

- 圧着工具（TC-1）へセットしてご使用ください。
- 圧着ダイスはコネクタにあわせてお選びください。



型名	適合コネクタ
<b>TCD-1DB</b>	BCJ-FC1, BCJ-FC1-7/16, BCJ-RUC1 BCP-C1, SMAP-C1
<b>TCD-31C</b>	BCP-C31, FP-C31, SPP-C31-CL
<b>TCD-3151D</b>	BP-C31, BP-C51, BP-LC31, BP-LC51 NP-C31, NP-C51, NP-LC31, NP-LC51 SJ-C31, SJ-C51, SMAP-C31A, SMAP-C51 SP-C31, SP-C51, TNP-C31, TNP-C51 TNP-LC31, TNP-LC51
<b>TCD-35CA</b>	BCP-C25, BCP-C25F, BCP-C33A BCP-C3B, BCP-C3F, BCP-C5B, BCP-LC3 BCP-LC5, BCP-PC3, BCP-PC3F BCP-PC5, BCP-PC5F, BCP-VC3 BCP-VC5, MBCP-C25F, MBCP-C3F FP-C3, FP-C3F, FP-C5, MCF-V5C3 MCM-V5C3, RCAP-C3A, RCAP-C3F RCAP-C5A, SPP-C33-CL
<b>TCD-35D</b>	BP-C3, BP-C4, BP-C5, TNP-C3, TNP-C4 TNP-C5, RCAP-C3GS
<b>TCD-4CA</b>	BCP-C4B, BCP-C4F, BCP-PC4, BCP-PC4F MBCP-C4, MBCP-C4F, BCJ-C4, FP-C4 FP-C4F, RCPA-C4A, RCAP-C4F, VP-C4A, VWP-C4A, MVP-C4
	BCP-C4B, BCP-C4F, BCP-PC4, BCP-C52

	BCP-PC4F, MBCP-C4, MBCP-C4F BCJ-C4, FP-C4, FP-C4F, RCAP-C4A RCAP-C4F, FP-C52, VP-C4A, VWP-C4A MVP-C4
<b>TCD-55FA</b>	BCP-C5FA, BCP-LC5F, MBCP-C5F, FP-C5F RCAP-C5F, BP-C5FA, NP-C5F, SP-C5F
<b>TCD-5CF</b>	BCP-C5FA, BCP-LC5F, MBCP-C5F FP-C5F, RCAP-C5F
<b>TCD-67HD</b>	BCP-C6HD, BCP-C7HD
<b>TCD-7CA</b>	BCP-C7A, BCP-C7FA, FP-C7FA